



Specification Sheet

BoneDry™ AXC

2034-C Van Buren Ave. • Indian Trail, NC 28079 • Phone: 704.334.8222

Description:


BoneDry™ AXC is an concentrated electrolyte-based accelerator that is used in a co-spray system to give an instant cure to the **BoneDry™** spray grade series of products. The AXC must be diluted before use. Follow Dilution instructions to prepare solution for use. The AXC once diluted gives the applicator the flexibility to apply multiple membrane layers in the same trip with out waiting for curing.

Dilution of AXC:

Dilute 1 part **BoneDry™ AXC** into 6 parts of fresh water and stir. The AXC should readily dilute. Once diluted it should be applied the same way the **BoneDry™ AXD** is applied.

Application:

BoneDry™ AXD is applied through a unique two-spray system called co-spraying. A special dual tip spray gun is used to allow AXD to be sprayed in conjunction with the liquid membrane.

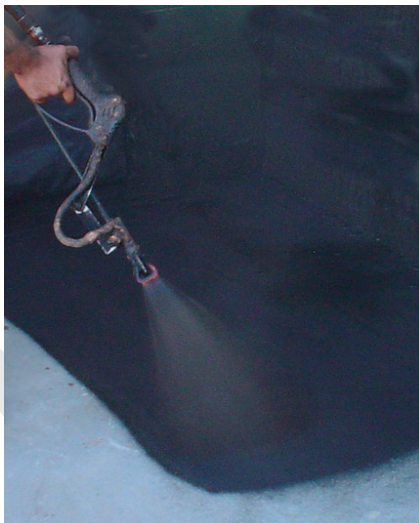

For more application
information visit
www.drydogbarriers.com
or email us
info@drydogbarriers.com

The information and recommendations discussed in this publication are believed to be correct. However, this should not be accepted as a guarantee of their accuracy, and confirming test should be run in your own plant or laboratory. No statement should be construed as a recommendation for any use, which would violate any patent rights. Nothing contained herein shall constitute a warranty with respect to the products described or their use.

BoneDry™ AXC
Issue: A
Revision: 1
Date: 08/23/05